


Path Timber Edging

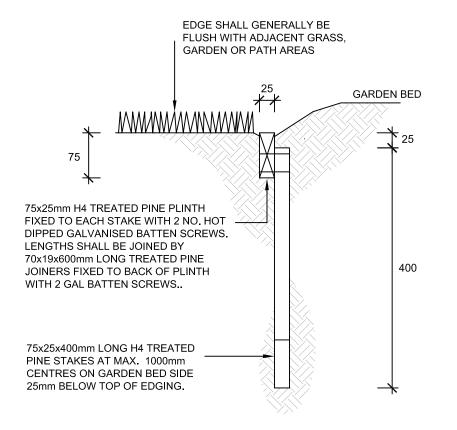

Garden Bed Timber Edging

Note: WHERE CURVES ARE REQUIRED, SAW-CUT SLOTS TO INSIDE (CURVE) FACE OF EDGE. FOR TIGHTER CURVES, THINNER EDGING MAY BE REQUIRED -CONTACT SUPERINTENDENT FOR INSTRUCTION

Drawing Title:

Garden/ Path Timber Edging

